



Sailrite

Binder Installation

Stationary & Swing Binders

#100102, #100103, #100104, #100105, #102582

www.sailrite.com



103550



Watch video tutorials on installing
and using your Sailrite binder at:

www.sailrite.com



F

A	feeder mouth
B	feeder ledge
C	binder slot
D	screws & washer

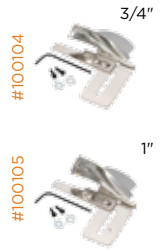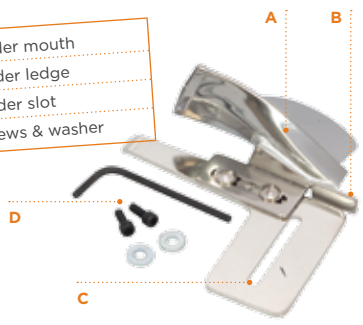

G

H




J

K



Installing a Stationary Binder


1. **Attach the binder to the sewing machine** by inserting the two screws (each with a washer) **D** through the binder slot **C** into the two holes in the bed of the machine **F**. Angle the binder slightly toward the presser foot to better feed the binding under the foot. Screw placement in the binder slot will vary from machine to machine.
2. **Position the narrow end of the binder G** as close as possible to the foot assembly without touching the foot or the feed dog using the two screws next to the feeder mouth **A**. Typically, the narrow end of the feeder mouth is right at the front edge of the needle plate slot opening **H**. The binder should not come into contact with the foot or feed dog when sewing.
3. **If using an Ultrafeed LSZ-1**, set the needle position lever in the "Right" position.
4. **J Feed proper-sized binding** into the wide end of the feeder mouth and use a screwdriver blade to pull the binding completely through the slot. Sew off a small portion of binding to test stitch position.
If presser foot rubs against feeder ledge **B** to get the correct stitch position, remove the feeder ledge with a dremel tool or hack saw.
5. **K Insert the raw fabric edge** that needs binding into the crease of the binding as it exits the binder mouth. Feed the material tightly into the crease of the binding and sew for a perfectly finished edge.

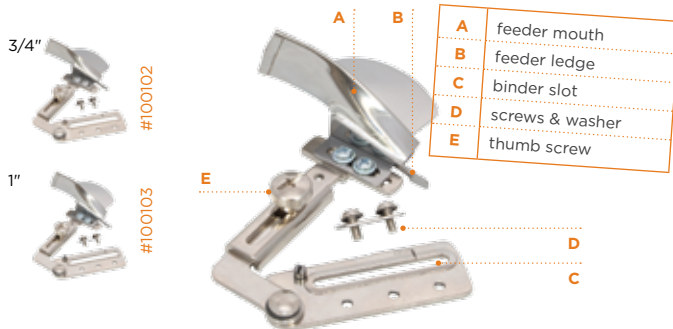

Installing a Swing Binder

1. **Attach the binder to the sewing machine** by inserting the two screws with the washer **D** through the binder slot **C** (not the 3 holes above the slot) into the two holes in the bed of the machine **F**. Screw placement in the binder slot will vary from machine to machine.
2. **Adjust the feeder mouth A** from left to right using the large thumb screw **E** and from front to back using the two screws next to the feeder mouth. Position the binder as close as possible to the foot assembly without touching the foot or the feed dog **G**. Typically, the narrow end of the feeder mouth is right at the front edge of the needle plate slot opening **H**. The binder should not come into contact with the foot or the feed dog when sewing.
3. **If using an Ultrafeed LSZ-1**, set the needle position lever in the "Right" position.
4. **J Feed proper-sized binding** into the wide end of the feeder mouth and use a screwdriver blade to pull the binding completely through the slot. Sew off a small portion of binding to test stitch position. If presser foot rubs against feeder ledge **B** to get the correct stitch position, remove the feeder ledge with a dremel tool or hack saw.
5. **K Insert the raw fabric edge** that needs binding into the crease of the binding as it exits the feeder mouth. Feed the material tightly into the crease of the binding and sew for a perfectly finished edge.

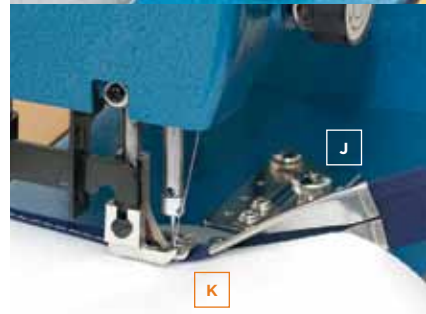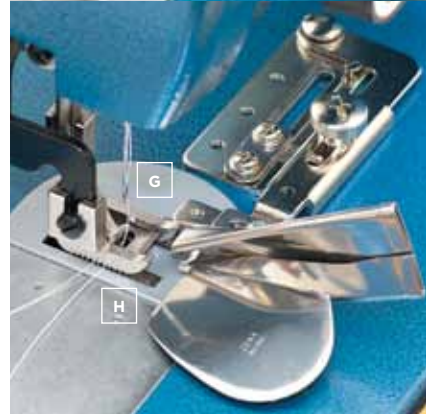

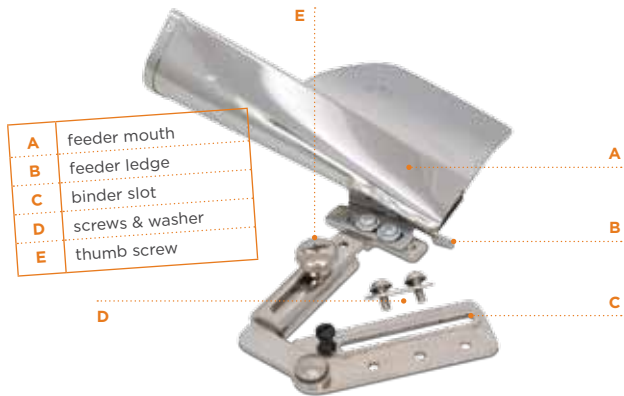

Installing a 2" Swing Binder #102582

1. **Attach the binder to the sewing machine** by inserting the two screws with the washer **D** through the binder slot **C** (not the 3 holes above the slot) into the two holes in the bed of the machine. Screw placement in the binder slot will vary from machine to machine.
2. **Adjust the feeder mouth **A**** from front to back using the two screws next to the feeder mouth. Position the binder as close as possible to the front of the presser foot without touching the foot or feed dog **F**. The binder should not come into contact with the foot or the feed dog when sewing. Adjust the stitch position close to the inside edge of the binding by moving the feeder mouth from left to right using the large thumb screw **E**.
3. **G Feed proper-sized binding** into the wide end of the feeder mouth and use a screwdriver blade to pull the binding completely through the slot. Sew off a small portion of binding to test stitch position.
4. **Insert the raw fabric edge** that needs binding into the crease of the binding as it exits the feeder mouth. Feed the material tightly into the crease of the binding and sew for a perfectly finished edge.

TIP: For lighter fabrics like Dacron tape, hold your finger in front of the binder to help keep the fabric from creeping **H**.