




[www.sailrite.com](http://www.sailrite.com)

# Snap Together Grommets

## Installation Instructions

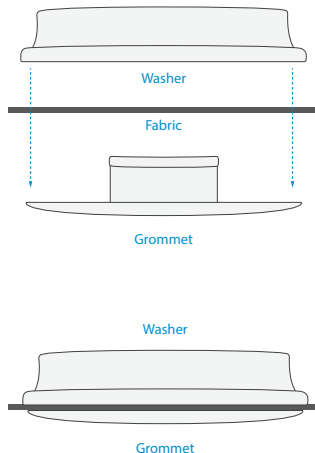

1. Cut hole using #5 hole cutter and hammer.
2. Snap washer and grommet together. Place wood block over assembly and tap with hammer if snapping is difficult.

To remove, pry apart with flat-head screwdriver and discard.

**One time use only.**