

Snap Fastener


Installation Instructions

CLOTH-TO-CLOTH SNAP FASTENER:

Drill a hole in the cloth where the snap fastener is to be placed with a 1/8" drill bit. Put the button part of the snap fastener through the hole and nest it in the round die. Place the socket part on the other side of the cloth and use the installation tool and a hammer to flatten the rivet. Now drill the other piece of cloth. Insert the rivet (eyelet) in the cloth and place the rivet into the other side of the round die. Place the stud (male part) over the rivet and flatten with the installation tool and a hammer.

CLOTH-TO-SURFACE SNAP FASTENER:

Drill a hole in the cloth where the snap fastener is to be placed with a 1/8" drill bit. Put the button part of the snap fastener through the hole and nest it in the round die. Place the socket part on the outer side of the cloth and use the installation tool and a hammer to flatten the rivet. Screw the screw stud (third part of the fastener) into appropriate surface.

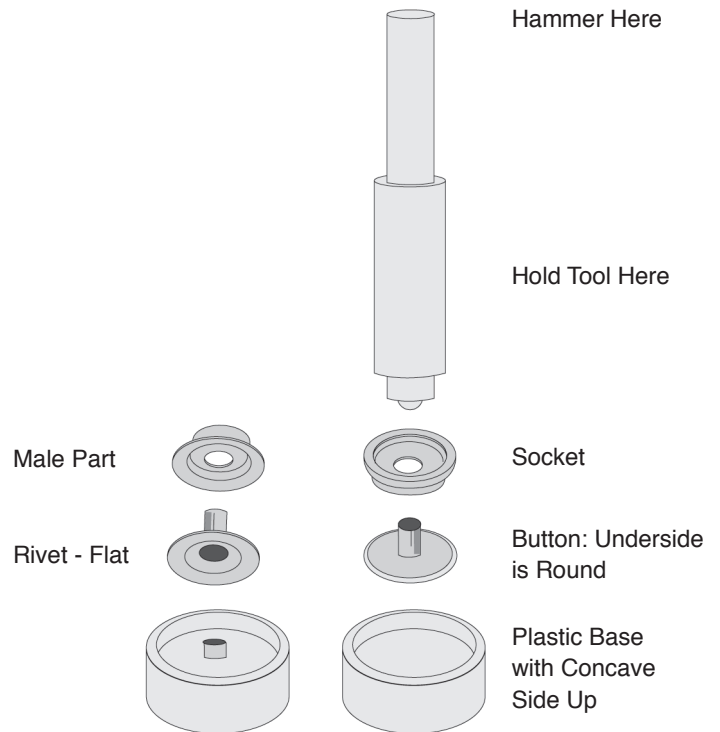

Sailrite Enterprises, Inc.
2390 East 100 South, Columbia City, IN 46725

Phone (800) 348-2769 / (260) 244-4647

Fax (260) 818-2005

Email info@sailrite.com

Sailrite.com

© 2015 Sailrite Enterprises, Inc.