




SAILRITE


Est. 1969

# SNAP TOGETHER GROMMETS

## Installation Instructions

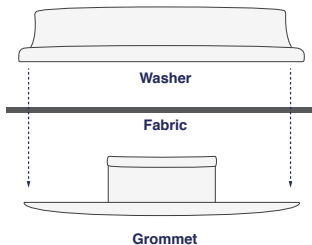

1. Cut hole using #5 hole cutter and hammer.
2. Snap washer and grommet together. Place wood block over assembly and tap with hammer if snapping is difficult.

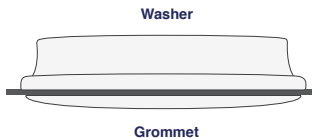

To remove, pry apart with flat-head screwdriver and discard.

One time use only.